




Dell Optiplex GX620 Front panel Replacement

Written By: Padraic Hoselton



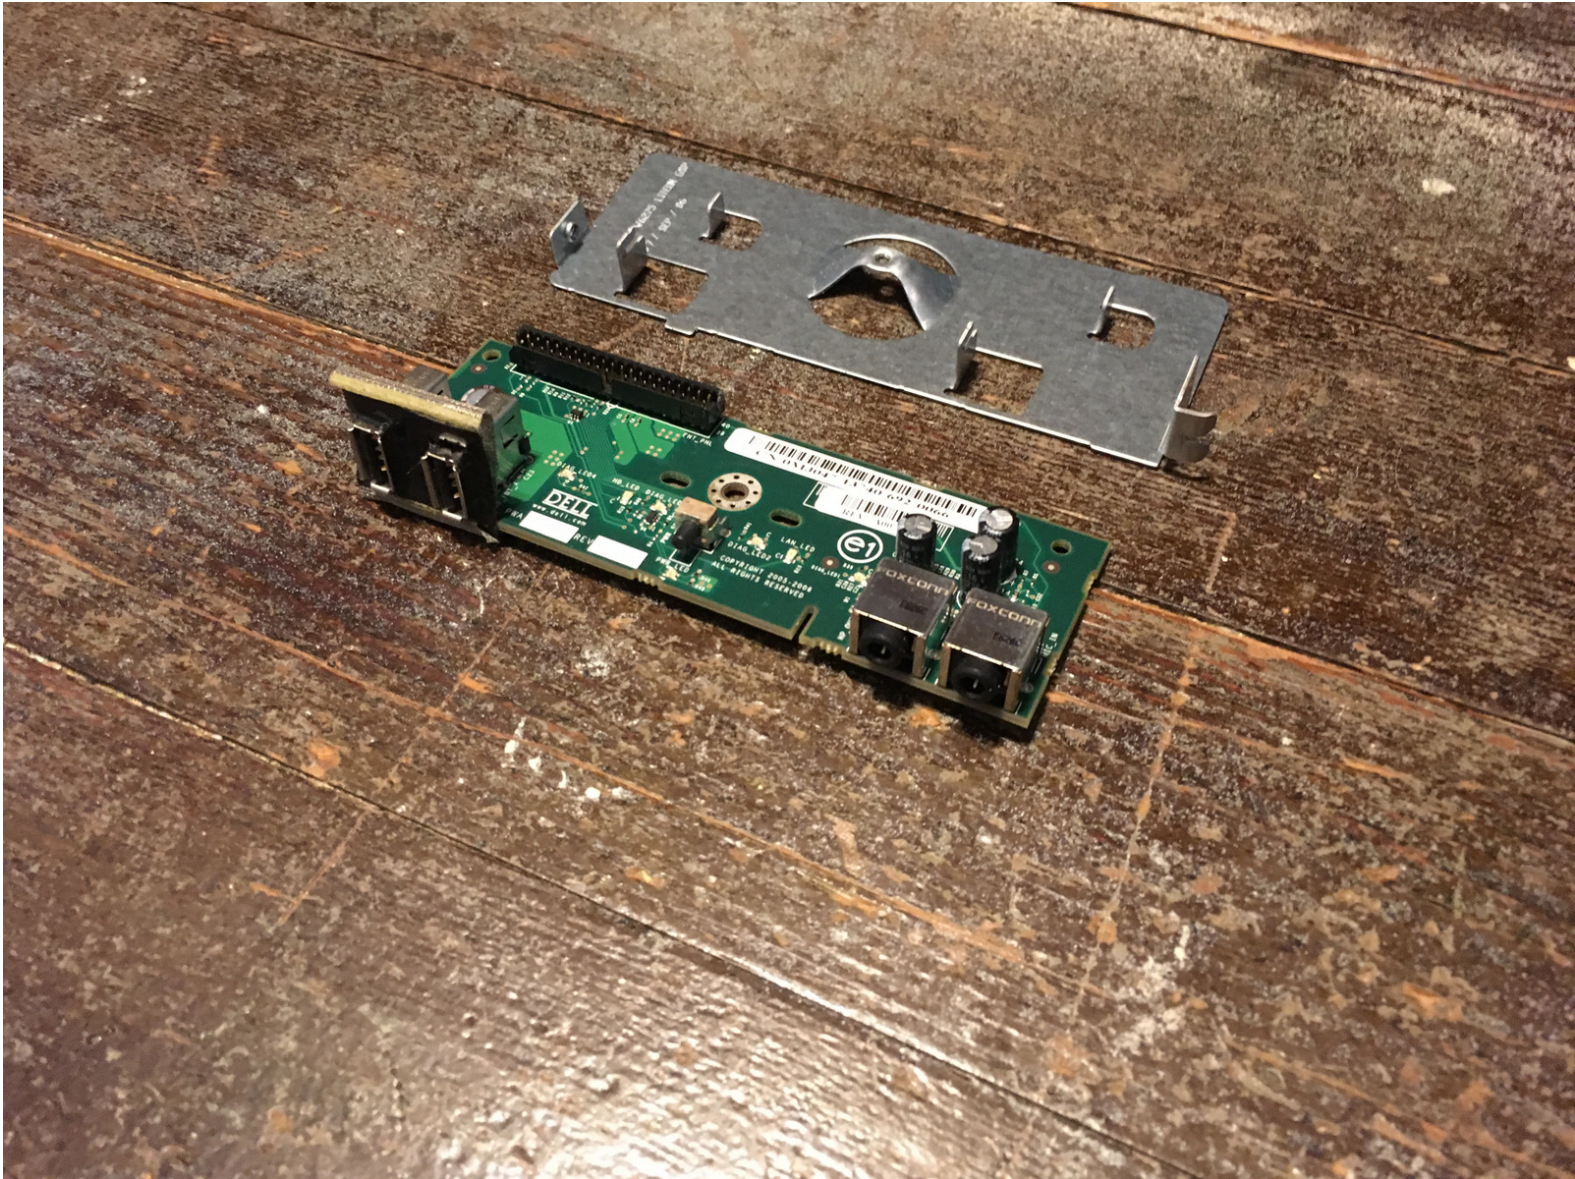

TOOLS:




- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Dell Optiplex GX620 Side Panel Disassembly






- With the computer standing upright, firmly pull on the tab at the back of the computer.
- When the side panel pops free, gently pull the panel away from the computer.
- ❗ If you have trouble freeing the side panel from the case, you may need to pull the tab a bit harder.

Step 2 — Unplug your hard drive.

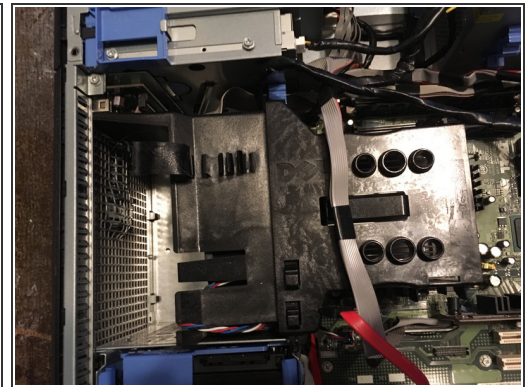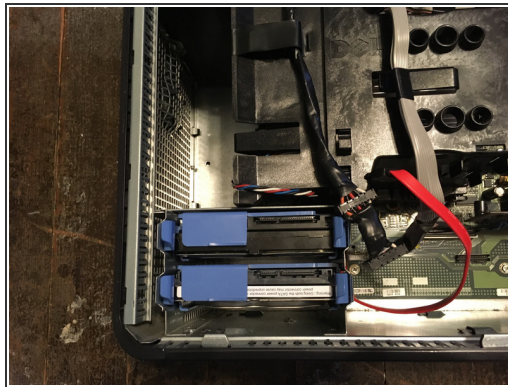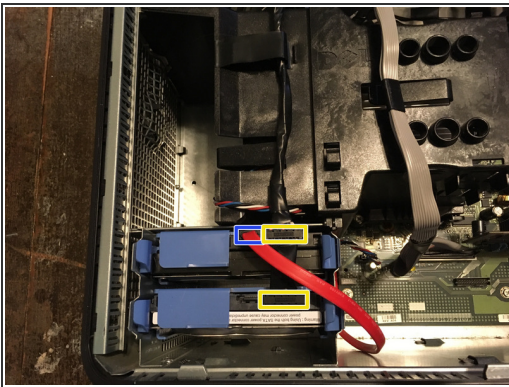



- Remove the SATA power and data cables.
- SATA Power
- SATA Data

Step 3 — Unplug your floppy drive.

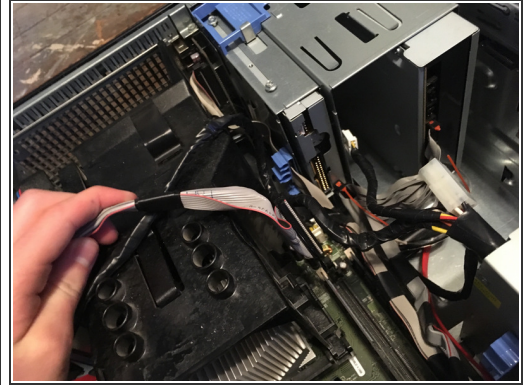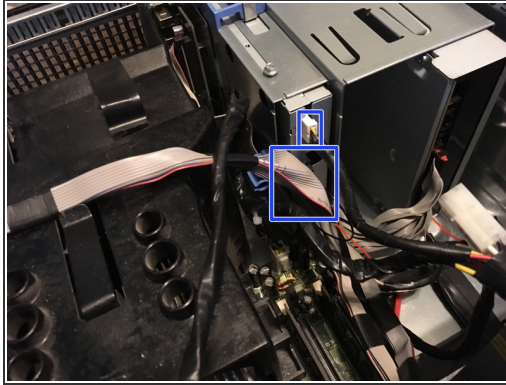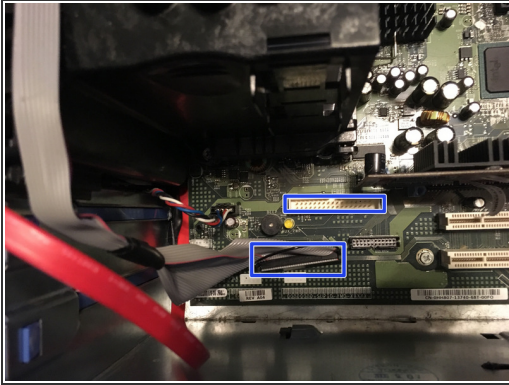


- Unplug the power and data cables.

Step 4 — Unplug the fan.

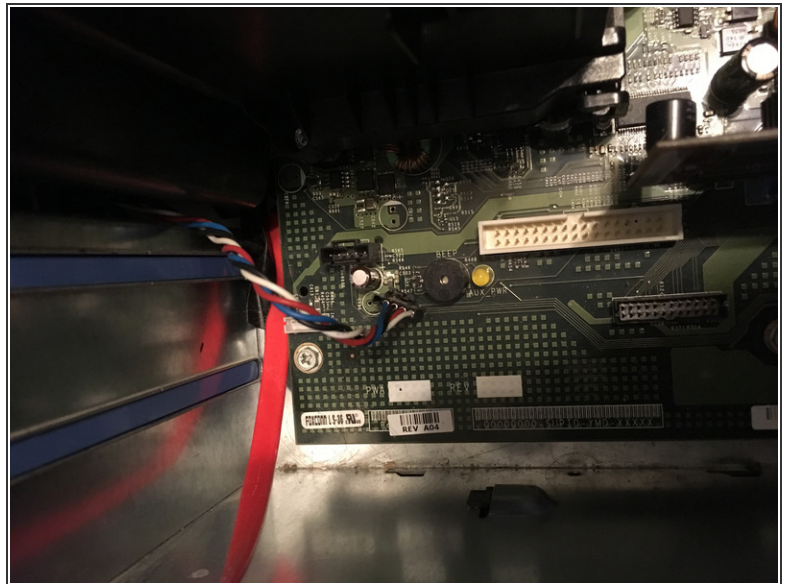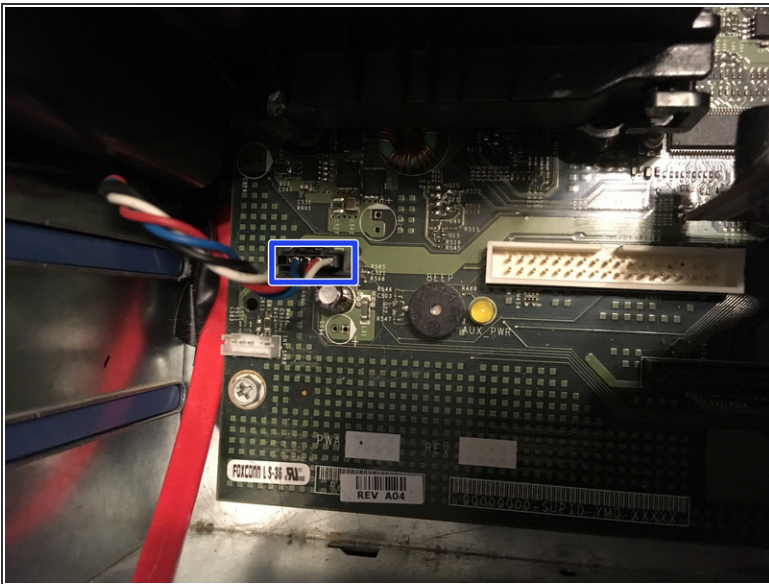




- Unplug the fan.

Step 5

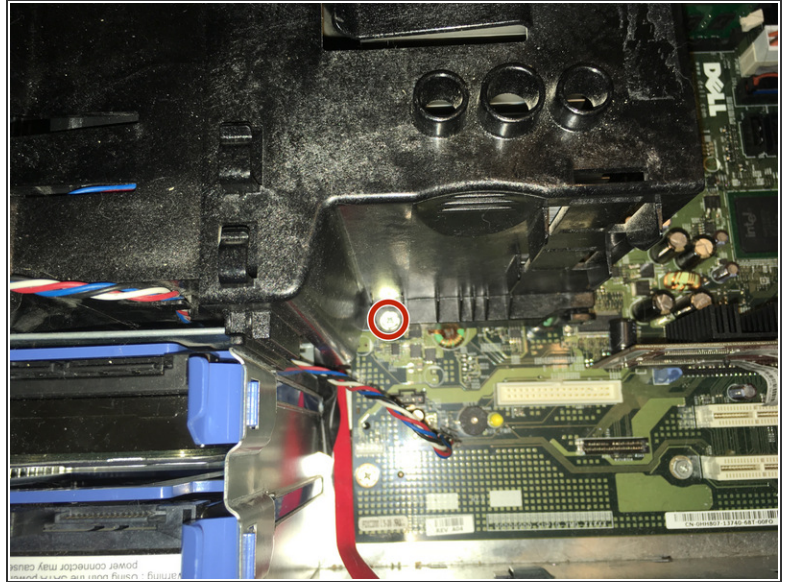


- Remove the two Phillips #2 screws.

Step 6 — Remove the heat sink.

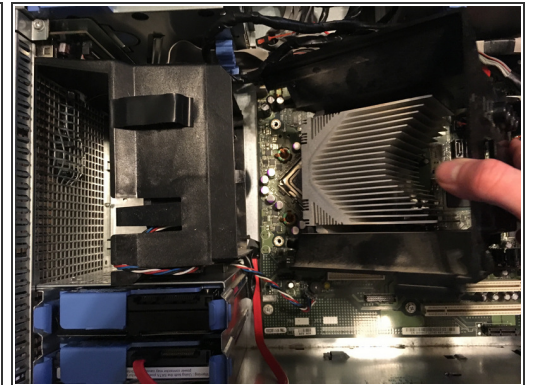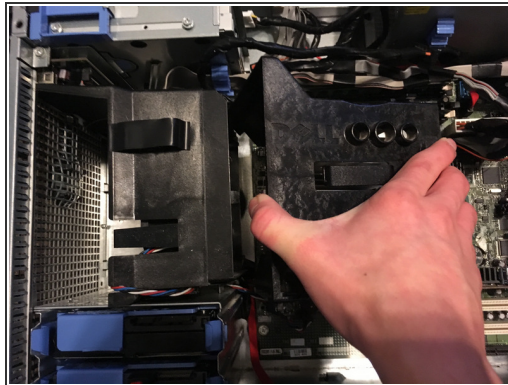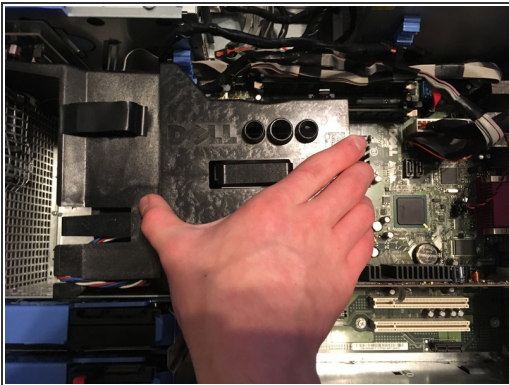


- Pull the heat sink up.

Step 7

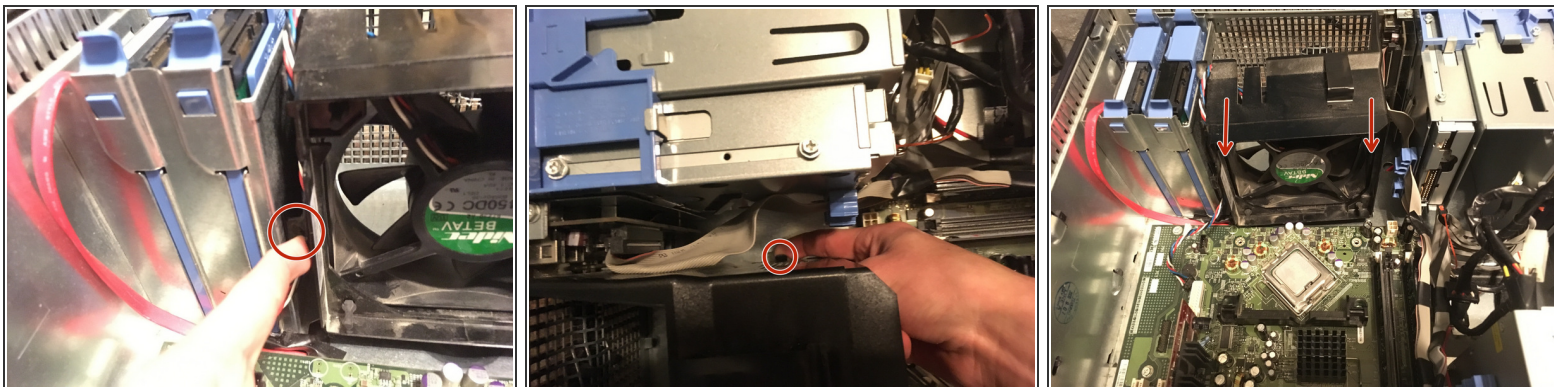



- Pull the two tabs and pull it out.
- This needs a lot of force to take it off.

Step 8 — Remove front panel

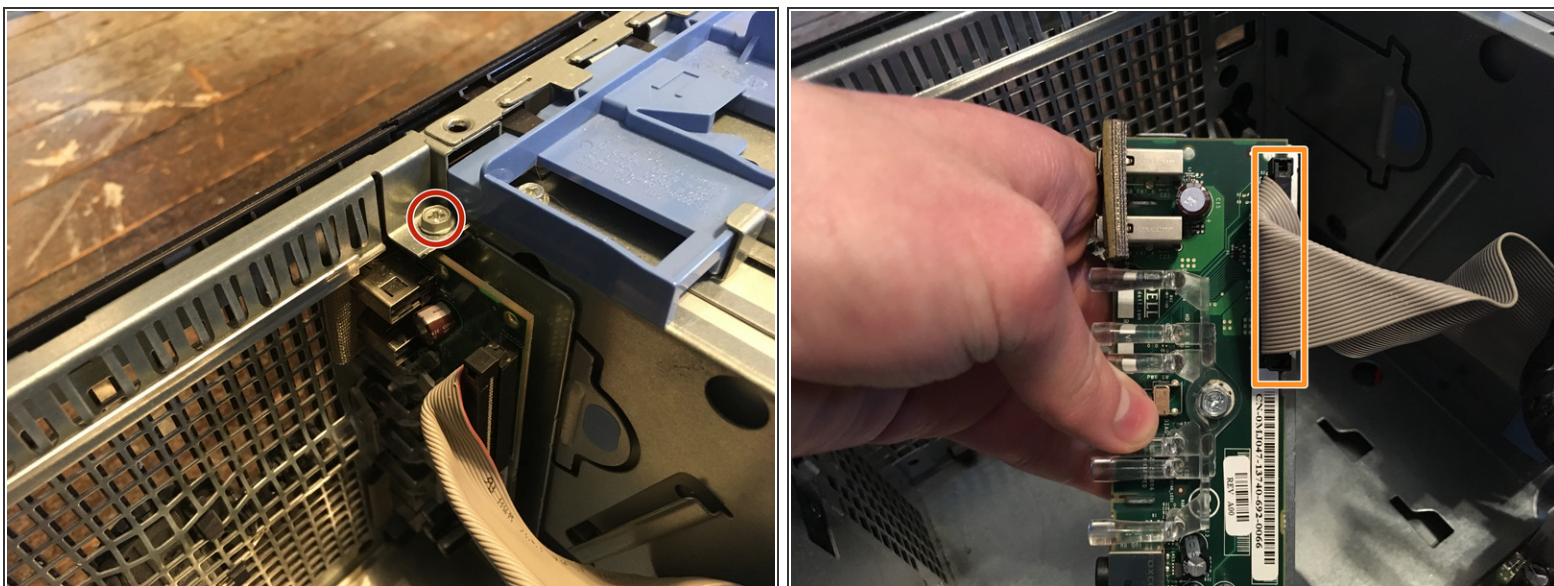

- Remove the one Phillips #2.
 - Remove the Data cable.
- i** Taking this cable off will brake some of the plastic thats locking it in. But you can still plug the cable back in.

Step 9 — Remove the last screw.

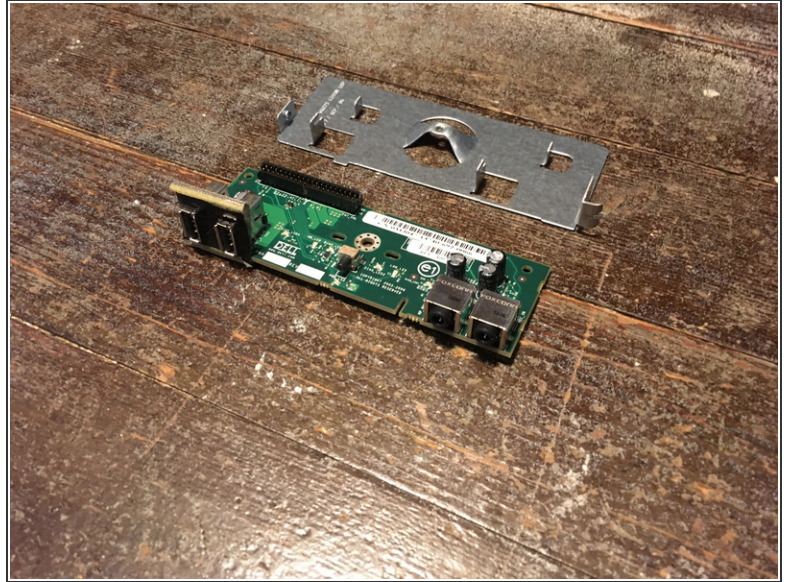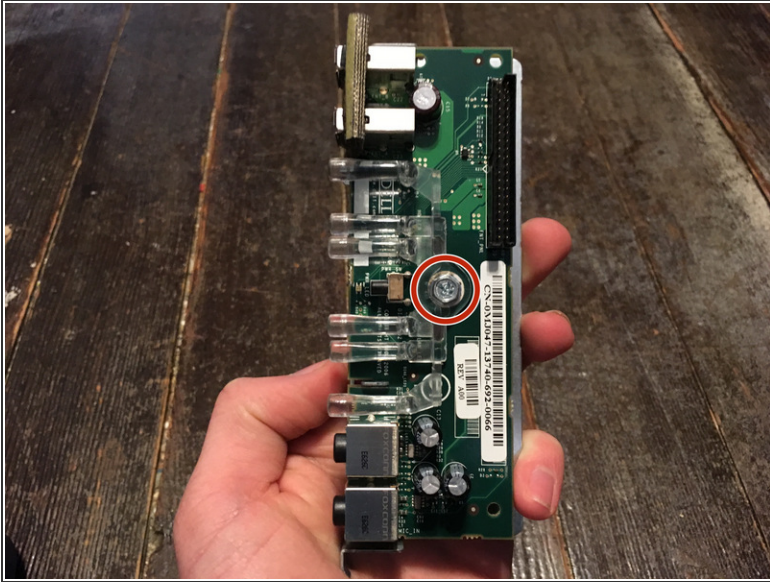

- Remove the one Phillips #2 screw.
- Now you can replace it with a new one.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-01 09:12:16 PM.